
Quick Start Guide Websense V10000 G3

websense violoo G5

Web & Email Security Appliance

Before you begin...

Plan your deployment before setting up the appliance. See the back of this guide for a deployment overview and reference sheet.

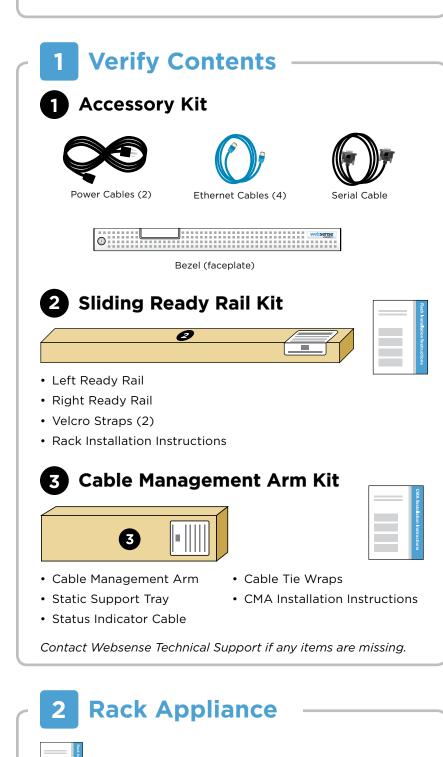

See the *Rack Installation Instructions* included in the Sliding Ready Rail kit.

3 Determine Security Mode

The appliance supports the following security modes:

- Web (Web Security Gateway/Anywhere)
- Email (Email Security Gateway/Anywhere)
- Web and Email (Email plus Websense Web Security or Web Security Gateway/Anywhere)


Based on your subscription and deployment plan, determine the appropriate security mode for this appliance.

4 Connect Network Cables —

Connect the appliance interfaces required by the security mode for this appliance. *Cat 5E cables (or better) are required. Do not use crossover network cables.*

	Web	Email	Web and Email
Required Ports:	C P1 N	C E1	C P1 N E1
Optional Ports:	P2 E1 E2	E2 P1 P2	P2 E2

* The P1 interface is not used for Websense Web Security in this mode

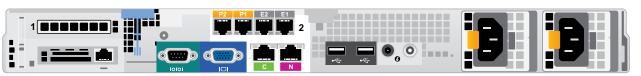

Interface Function

С

P1 P2


E1 E2

Ν

- Provides communication for appliance modules and handles database downloads from Internet.
- Receives connections from TRITON Unified Security Center.
- Provides access to the Appliance Manager, Content Gateway Manager, and the optional on-board Web Security console.
- Enables Web Security Gateway proxy to receive Internet requests and communicate with Web servers.
- Optionally bonded to E1/E2 in Email mode.
- Allows Network Agent to monitor Internet requests.
- Connect to switch port. If sending blocking information through N, connect to bidirectional span, monitor, or mirror port on switch.
- Enables Email Security Gateway to receive and send mail.
- Provides personal email management and cluster communication.
- Requires access to mail server.
- Optionally bonded to P1/P2 in Web mode.

5 Connect Input Device

1. Connect to the appliance via serial port or KVM in order to access the command line interface for initial configuration. *Serial port settings are: 9600 baud, 8 bits, no parity.*

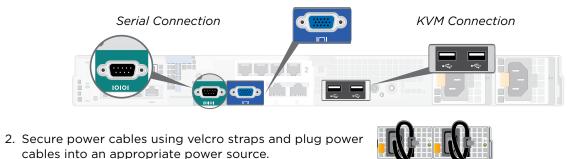

6 Power On Appliance

Power on the appliance and check the following indicators:

Front

- Power button is illuminated.
- Hard drive LEDs are green.

Rear

- Power supply LEDs are green.
- LEDs for connected interfaces (NICs) are green.
- System status indicator (LED left of power supplies) is solid blue.

Contact Websense Technical Support if any indicators are not illuminated correctly.

7 Configuration Overview

Please refer to the V-Series Appliance *Getting Started* guide for more details.

Initial Configuration

Appliance Command Line (firstboot script)

- Configure security mode.
- Configure Appliance Controller interface (C).

Appliance Manager

- Access the Appliance Manager via the Logon Portal.
- Configure NTP servers/system time.
- Configure applicable network interfaces.

Web Mode

TRITON Unified Security Center

- Enter subscription key, update Master Database, configure Network Agent, and configure policies in TRITON Web Security.
- Requires Windows Server 2008 R2 or Windows Server 2012.

Content Gateway Manager (proxy)

• Configure user authentication and select protocols.

Email Mode

TRITON Unified Security Center


- Complete configuration wizard, enter subscription key, and configure policies in TRITON Email Security. Configure email DLP policies in TRITON Data Security.
- Requires Windows Server 2008 R2 or Windows Server 2012.

Web and Email Mode

Perform steps above for Web mode followed by Email mode. If your site does not have a Websense proxy, skip the Content Gateway Manager configuration.

Appliance Deployment Overview

You can deploy one or more appliances on your network. The diagram below illustrates a basic appliance deployment. A separate computer with Windows Server® 2008 R2 or Windows Server 2012 is required for running TRITON Unified Security Center. See the V-Series Appliance Getting Started guide for details.

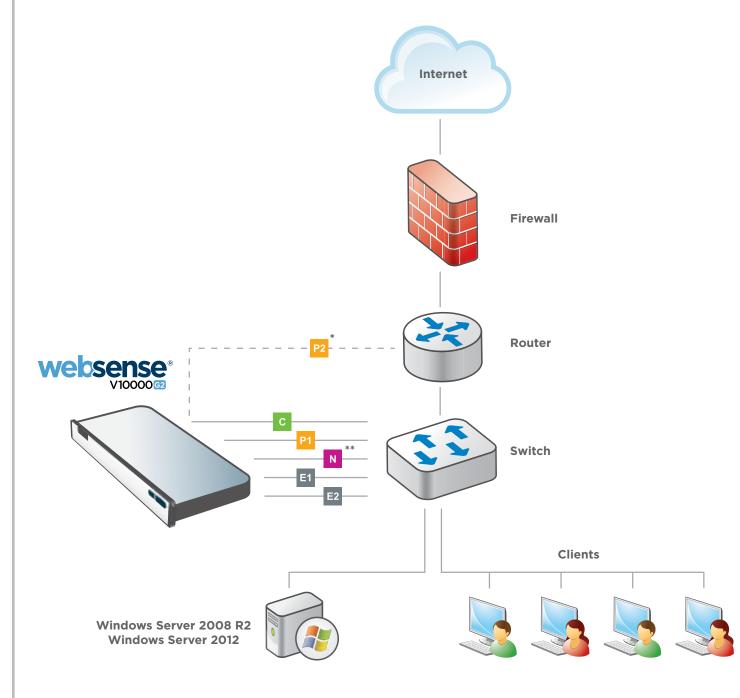

* P2 is optional and may be connected to a router or switch.

** Connect to bidirectional span, monitor, or mirror port if sending blocking information through N.

Support & Resources

Getting Started Guide www.websense.com/library/

Online Support and Contact Information support.websense.com

Deployment Reference Sheet

Appliance Information Logon Portal URL: **Network Configuration Appliance Controller Interface (C) IP Address:** Subnet Mask: **Default Gateway:** Websense Content Gateway Interfaces (P1 & **P1 IP Address:** Subnet Mask: **P2 IP Address:** Subnet Mask: **Network Agent Interface (N) IP Address:** Subnet Mask: **Default Gateway: Email Security Gateway Interfaces (E1 & E2)** E1 **IP Address: Subnet Mask: E2 IP Address:** Subnet Mask:

TRITON Unified Security Center

Web Security	
Policy Server IP:	
Log Server IP:	
Subscription Key:	
Email Security	
Log Server IP:	
Authentication Mode:	

See the V-Series Appliance Getting Started guide for details.

Hostname:

admin is the default user name for Appliance Manager, TRITON Unified Security Center, and Content Gateway Manager.

Primary DNS:	
Secondary DNS:	
Tertiary DNS:	
2)	
-7	
Default Gateway:	
Primary DNS:	
Secondary DNS:	
Tertiary DNS:	
	Above settings apply to P1 and P2
Primary DNS:	
Secondary DNS:	
Tertiary DNS:	
Default Gateway:	
Primary DNS:	
Secondary DNS:	
Tertiary DNS:	
	Above settings apply to E1 and E2

SQL Server IP Address: User Name: Password: