Quick Start Guide Websense V5000 G2 Web Security



Before you begin...

Plan your deployment before setting up the appliance. See the back of this guide for a deployment overview and reference sheet.



Rack Installation

To rack the V5000 G2 appliance, use a rack tray (not included).

Bezel (faceplate)


1. Obtain a rack tray and install into desired server rack.



2. Place appliance on tray and secure to server rack using mounting screws on front of appliance.



Connect Network Cables

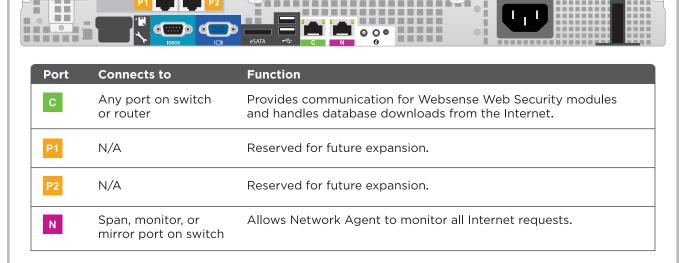

Cat 5E cables (or better) are required. Do not use crossover network cables.

Connect Input Device

Keyboard/Monitor Connection



Connect a computer to serial port using null modem cable (provided). Or, connect a terminal server to serial port using a straight-through cable (not provided).

Serial Port Connection

Connect a monitor and keyboard to appliance, either directly or through a KVM (keyboard/ video/mouse) switch.

Serial port settings: 9600 baud, 8 bits, no parity

Power On Appliance

- 1. Plug power cable into an appropriate power source.
- 2. Press power button on front of appliance (a).
- 3. Check the following indicators:
 - a) Power button is illuminated (front).
 - b) System status indicator is solid blue (front).
 - c) LEDs for connected interfaces (NICs) are illuminated (back).



Contact Websense Technical Support if any indicators are not illuminated correctly.

Install Bezel (optional)



- 1. Insert right tab into slot on appliance.
- 2. Press left tab in firmly until bezel snaps into place.
- 3. Appliance can be locked using keys included with bezel. (optional)

Configuration Overview

- 1. **Appliance Command Line:** Configure the integration method and Appliance Controller interface (C) via firstboot script.
- 2. Logon Portal: Access Logon Portal via browser to perform remaining tasks.
- 3. Appliance Manager: Configure NTP servers/system time, Network Agent interface (N), and all other necessary settings.
- 4. **TRITON**[™] **Web Security:** Enter subscription key, update Master URL Database, configure Network Agent and customize policies. Windows Server® 2003/2008 required for Log Server and optional components.

See the **V5000 G2 Web Security Getting Started** guide online for detailed instructions.

Support & Resources

Getting Started Guide


www.websense.com/library/ Also available on the Documentation disk.

Online Support and Contact Information www.websense.com/support/



Appliance Deployment Overview

You can deploy one or more appliances on your network. The diagram below illustrates a basic appliance deployment. A separate computer with Windows Server® 2003/2008 is required for running Log Server and Microsoft SQL Server®. See the *Getting Started* guide for details.

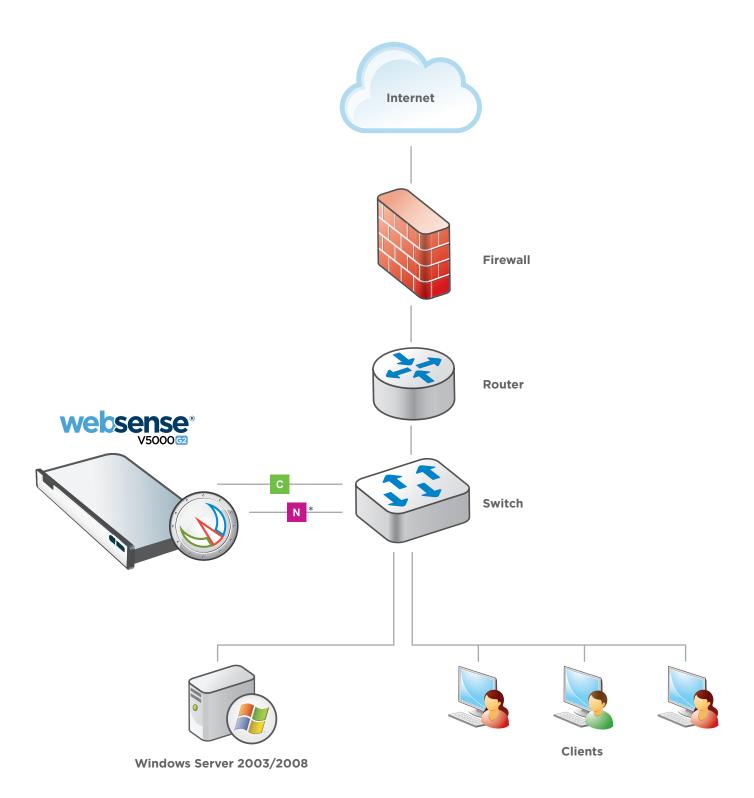

Deployment Reference Sheet

Network Configuration	
Hostname:	
Appliance Controller Interface (C)	
IP Address:	Primary DNS:
Subnet Mask:	Secondary DNS:
Default Gateway:	Tertiary DNS:
Network Agent Interface (N)	
IP Address:	Primary DNS:
Subnet Mask:	Secondary DNS:
Default Gateway:	Tertiary DNS:
Logon Information	
Logon Information	
Logon Portal URL: http://	C interface IP Address
Default User Names	
Appliance Manager: admin	
TRITON - Web Security: WebsenseAdministrator	
Unified password is set during firstboot script.	
Additional Components	
Policy Server IP:	
Log Server IP:	
Subscription Key:	
SQL Server	
IP Address:	
User Name:	
Password:	

^{*} Connect the N interface to a span, monitor, or mirror port on the switch.