Quick Start Guide Forcepoint V10000 G4

Web & Email Protection Appliance



Before you begin...

Plan your deployment before setting up the appliance. See the back of this guide for a deployment overview and reference sheet.

Verify Contents











Bezel (faceplate)

Sliding Ready Rail Kit



- · Left Ready Rail
- · Right Ready Rail
- Velcro Straps (2)
- Rack Installation Instructions

Cable Management Arm Kit





- Cable Management Arm
- Cable Tie Wraps
- Static Support Tray
- CMA Installation Instructions
- Status Indicator Cable

Contact Forcepoint Technical Support if any items are missing.

Rack Appliance



See the *Rack Installation Instructions* included in the Sliding Ready Rail kit.

Determine Security Mode

The appliance supports the following security modes:

- Web (TRITON AP-WEB)
- Email (TRITON AP-EMAIL)
- Web and Email (AP-EMAIL plus either AP-WEB or Web Filter & Security)


Based on your subscription and deployment plan, determine the appropriate security mode for this appliance.

Connect Network Cables —

Connect the appliance interfaces required by the security mode for this appliance. Cat 5E cables (or better) are required. Do not use crossover network cables.



* The P1 interface is not used for Web Filter & Security in this mode.

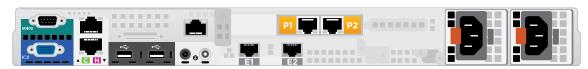

Interface Function



- Provides communication for appliance modules and handles database downloads from Internet.
- Receives connections from TRITON Manager.
- Provides access to the Appliance Manager and Content Gateway Manager.
- Enables Content Gateway proxy to receive Internet requests and communicate with Web servers.
- Optionally bonded to E1/E2 in Email mode.
- Allows Network Agent to monitor Internet requests.
- · Connect to switch port. If sending blocking information through N, connect to bidirectional span, monitor, or mirror port on switch.
- Enables TRITON AP-EMAIL to receive and send mail.
- Provides personal email management and cluster communication. • Requires access to mail server.
 - Optionally bonded to P1/P2 in Web mode.

Connect Input Device

1. Connect to the appliance via serial port or KVM in order to access the command line interface for initial configuration. Serial port settings are: 9600 baud, 8 bits, no parity.



2. Secure power cables using velcro straps and plug power cables into an appropriate power source.



Power On Appliance

Power on the appliance and check the following indicators:

- Power button is illuminated.
- · Hard drive LEDs are green.

Rear

- Power supply LEDs are green.
- LEDs for connected interfaces (NICs) are green.
- System status indicator (LED left of power supplies) is solid

Contact Forcepoint Technical Support if any indicators are not illuminated correctly.

Configuration Overview

Please refer to the V-Series Appliance Getting Started guide for more details.

Initial Configuration

Appliance Command Line (firstboot script)

- · Configure security mode.
- Configure Appliance Controller interface (C).

Appliance Manager

- Access the Appliance Manager via the Logon Portal.
- · Configure NTP servers/system time.
- Configure applicable network interfaces.

Web Mode

TRITON Manager

- Enter subscription key, update Master Database, configure Network Agent, and configure policies in TRITON Manager.
- Requires Windows Server 2008 R2 or Windows Server 2012.

Content Gateway Manager (proxy)

Configure user authentication and select protocols.

Email Mode

TRITON Manager

- Complete configuration wizard, enter subscription key, and configure policies in the Email module. Configure email DLP policies in the Data module.
- Requires Windows Server 2008 R2 or Windows Server 2012.


Web and Email Mode

Perform steps above for Web mode followed by Email mode. If your site does not have a Forcepoint proxy, skip the Content Gateway Manager configuration.

QSG430-100_RevC ©2016 Forcepoint LLC. All rights reserved

Appliance Deployment Overview

You can deploy one or more appliances on your network. The diagram below illustrates a basic appliance deployment. A separate computer with Windows Server® 2008 R2 or Windows Server 2012 is required for running TRITON Manager. See the V-Series Appliance *Getting Started* guide for details.

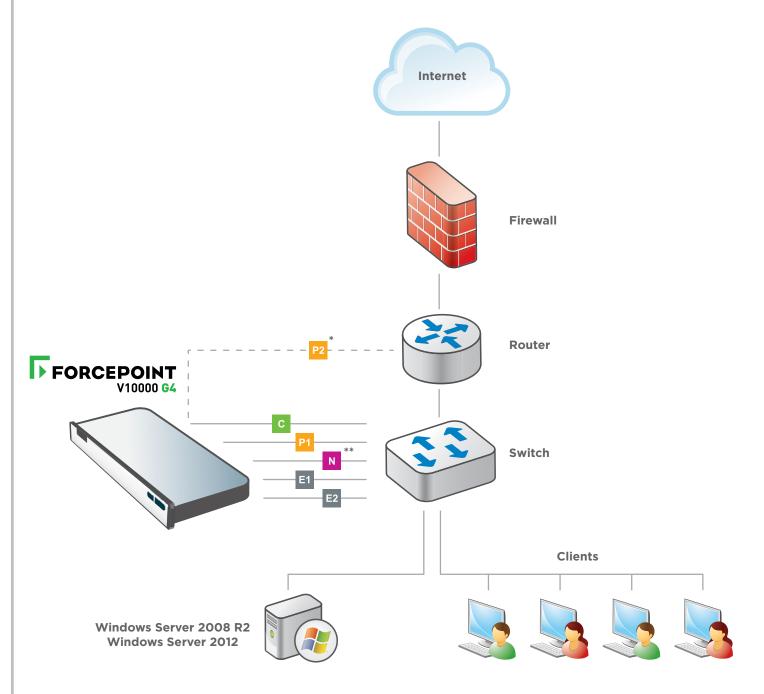

- * P2 is optional and may be connected to a router or switch.
- ** Connect to bidirectional span, monitor, or mirror port if sending blocking information through N.

Support & Resources

Getting Started Guide
WWW.forcepoint.com

Online Support and Contact Information

WWW.forcepoint.com/support/

Deployment Reference Sheet

Appliance Information	
Logon Portal URL:	Hostname:
admin is the default user name for Appliance Mana	ager, TRITON Manager, and Content Gateway Manager.
Network Configuration	
Appliance Controller Interface (C)	
IP Address:	Primary DNS:
Subnet Mask:	Secondary DNS:
Default Gateway:	Tertiary DNS:
Content Gateway Interfaces (P1 & P2)	
P1	
IP Address:	Default Gateway:
Subnet Mask:	Primary DNS:
P2	Secondary DNS:
IP Address:	Tertiary DNS:
Subnet Mask:	Above settings apply to P1 and P2
Network Agent Interface (N)	
IP Address:	Primary DNS:
Subnet Mask:	Secondary DNS:
Default Gateway:	Tertiary DNS:
TRITON AP-EMAIL Interfaces (E1 & E2)	
E1	
IP Address:	Default Gateway:
Subnet Mask:	Primary DNS:
E2	Secondary DNS:
IP Address:	Tertiary DNS:
Subnet Mask:	Above settings apply to E1 and E2
TRITON Manager	
Web	SQL Server
Policy Server IP:	IP Address:
Log Server IP:	User Name:
Subscription Key:	Password:
Email	
Log Server IP:	
Authentication Mode:	

See the V-Series Appliance *Getting Started* guide for details.