

# Quick Start Guide

## Websense V10000 G4

### TRITON RiskVision Appliance

## ⚠ Before you begin...

Plan your deployment before setting up the appliance. See the **Setup Guide** for more information about deployment options.

## 1 Verify Contents

### 1 Accessory Kit



Power Cables (2)



Ethernet Cables (2)

 


Serial Cable




Bezel (faceplate)

### 2 Sliding Ready Rail Kit



- Left Ready Rail
- Right Ready Rail
- Velcro Straps (2)
- Rack Installation Instructions

### 3 Cable Management Arm Kit

 

- Cable Management Arm
- Cable Tie Wraps
- Static Support Tray
- CMA Installation Instructions
- Status Indicator Cable

Contact Websense Technical Support if any items are missing.

## 2 Rack Appliance




See the **Rack Installation Instructions** included in the Sliding Ready Rail kit.

## 3 Connect Network Cables

Connect the appliance interfaces. Cat 5E cables (or better) are required. Do not use crossover network cables.

Required Ports: **C** **N**

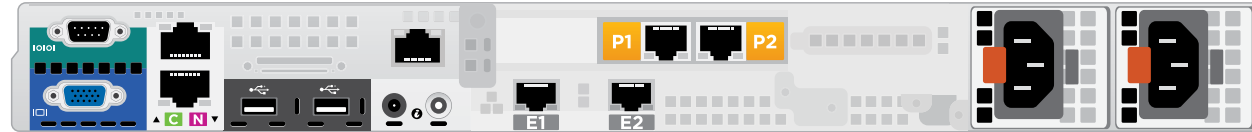

Interface	Function
<b>C</b>	<ul style="list-style-type: none"> <li>• Enables Local Manager communication</li> <li>• Used for subscription verification, analytic and category database downloads, product updates, and sending feedback</li> <li>• Used for communication with cloud-based components, including the File Sandbox</li> </ul>
<b>N</b>	<ul style="list-style-type: none"> <li>• Capture port, used to monitor network traffic</li> <li>• Connect to a port mirror or network tap</li> </ul>

## 4 Power On Appliance

Secure power cables using velcro straps and plug power cables into an appropriate power source.



Power on the appliance and check the following indicators:

### Front

- Power button is illuminated.
- Hard drive LEDs are green.

### Rear

- Power supply LEDs are green.
- LEDs for connected interfaces (NICs) are green.
- System status indicator (LED left of power supplies) is solid blue.

Contact Websense Technical Support if any indicators are not illuminated correctly.


## 5 Installation Overview

Refer to the TRITON RiskVision **Setup Guide** for complete installation instructions.

1. Connect a keyboard and mouse to the appliance. (You can alternatively cable the appliance iDRAC interface, then connect to the appliance iDRAC via a web browser.)
2. Log in as **root** with password **websense123**, then create a new root password when prompted.
3. The installation process attempts to acquire an IP address for the C interface via DHCP.
  - If DHCP is enabled in your network, use the **ifconfig** command to find the IP address assigned to **eth0**.
  - If DHCP is not enabled in your network, use the **system-config-network** command to assign an IP address to **eth0**, then use the **service network restart** command to restart your network interfaces.

After setting the IP address, use the **/opt/websense/rvadmin.sh restart** command to restart all of the RiskVision services.

4. Use the **timezone** command to update system time settings on the appliance.
5. From another machine, use Firefox or Chrome to log in to the RiskVision Local Manager as **admin** (password **admin**):  
[https://<c\\_interface\\_ip\\_address>:8443](https://<c_interface_ip_address>:8443)
6. To change the admin password, select **admin** in the tool bar at the top of the page, then click **Change Password**.

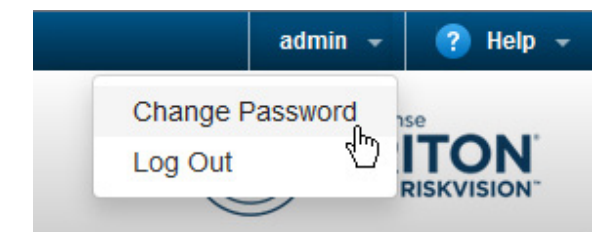

Enter and confirm a new password when prompted.

7. Follow the steps in the **Setup Guide** to finish configuring RiskVision and start analyzing traffic.